

OPERATION MANUAL

INVENTORY OF YOUR **Merlin[®] -CW60** BOX

Inside This Box You Will Find:

1. A 96-270volt 50-60Hz Merlin-CW60 Moving Light
2. A 1.8 meter UL/CE-listed a/c power cord
3. 2X Clamp Mounts

FUNCTION SUMMARY

- * Color: RGB color mixing
- * Strobe: Variable electronic dimmer (0 – 100%) and Variable electronic strobe
- * Sound-Active, Stand-Alone, Master / Slave, Pan / Tilt and Display Invert
- * Pan: 520° Tilt: 245°
- * Automatic Pan/Tilt position correction.
- * Lamp: High Power RGB LED 60watt Lamp
- * Size (mm): 270 x 250 x 250
- * Weight: 5.8 kg



DMX CHANNEL SUMMARY

Each DMX channel or “handle” coming from a controller has 255 “increments” of power within that “handle”. That channels function and the things triggered by the ascending increments within that channel for your Merlin-CW60 are listed here:

Merlin -W18&W30&W60 DMX CONFIGURATION

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9	CH10	CH11	CH12
Pan	Pan 16bit	Tilt	Tilt 16bit	Pan/Tilt Speed	Strobe	Dimmer	Red.	Green	Blue	Color Mixing	Reset
255	255	255	255	255	255	255	255	255	255	255	255
↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0
					↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0					Fast ↑ Color ↑ Macros slow 129 128 W 120 → 127 C 101 → 120 M 81 → 100 Y 61 → 80 B 41 → 60 G 21 → 40 R 1 → 20 0	↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ ↑ 0

MENU SUMMARY

Keys:



Scroll Up



Scroll Down



Menu.



Enter

Address	8888	8000	8588	
"Master" or "DMX" Mode	8888	8088	Master	DMX
Sound-Activated Mode	8858	8088	No sound-activated	Stand-alone
Auto Mode	8888	8088	No Auto program	Multi-stepped program
Manual Reset	8858	8088	Responds normally	Default reset setting
Factory Default Setting	8858	8088	Factory Default Setting	Factory Default Setting
Function Test	8888	8088	Responds normally	Function Test
Red Manual Reset	8888	8000	8255	Dimmer Scroll through the menu
Green Manual Reset	8888	8000	8255	Dimmer Scroll through the menu
Blue Manual Reset	8888	8000	8255	Dimmer Scroll through the menu
NO Display	8888	8088	Display reads normally	Close the display for after six second
Display	8885	8088	Display reads normally	Invert the display
TILT invert	8888	8088	Responds normally	Reversed to any control inputs
PAN invert	8888	8088	Responds normally	Reversed to any control inputs

However, It could also mean you have a slightly larger problem. It is possible that the zoom lenses has either come loose, slipped down its axle or even became warped and is now rubbing against the sensor. In either case, see our website at www.toplit.com for instructions on fixing/repairing this problem. **DO NOT** use this unit until it is fixed or you could permanently scuff/damage the sensor and render it useless!



Copyright 2008 **TOPLITE** International