

MENU SUMMARY

Keys:



Scroll Up



Scroll Down



Menu.



Enter

Address	8888	8888	8888	8588	
“Master” or “DMX” Mode	8888	8888	Master	8888	DMX
Sound-Activated Mode	8858	8888	No sound-activated	8888	Stand-alone
Auto Mode	8888	8888	No Auto program	8888	Multi-stepped program
Manual Reset	8858	8888	Responds normally	8888	Default reset setting
Factory Default Setting	8858	8888	Factory Default Setting	8888	Factory Default Setting
Function Test	8888	8888	Responds normally	8888	Function Test
Red Manual Reset	8888	8888	8255		Dimmer Scroll through the menu
Green Manual Reset	8888	8888	8255		Dimmer Scroll through the menu
Blue Manual Reset	8888	8888	8255		Dimmer Scroll through the menu
NO Display	8888	8888	Display reads normally	8888	Close the display for after six second
Display	8885	8888	Display reads normally	8888	Invert the display
TILT invert	8888	8888	Responds normally	8888	Reversed to any control inputs
PAN invert	8888	8888	Responds normally	8888	Reversed to any control inputs

HOWEVER:

It could also mean you have a slightly larger problem. It is possible that the Gobo wheel has either come loose, slipped down its axle or even became warped and is now rubbing against the sensor. In either case, see our website at www.toplit.com for instructions on fixing/repairing this problem. **DO NOT** use this unit until it is fixed or you could permanently scuff/damage the sensor and render it useless!



Copyright 2009 **TOPLITE** International